


Must use 10mm screws on 20" model #s  
PDI-P20lcdc and LD-20A76UD

# THLCDF Furniture Mount

## LCD monitors with 100mm VESA patterns

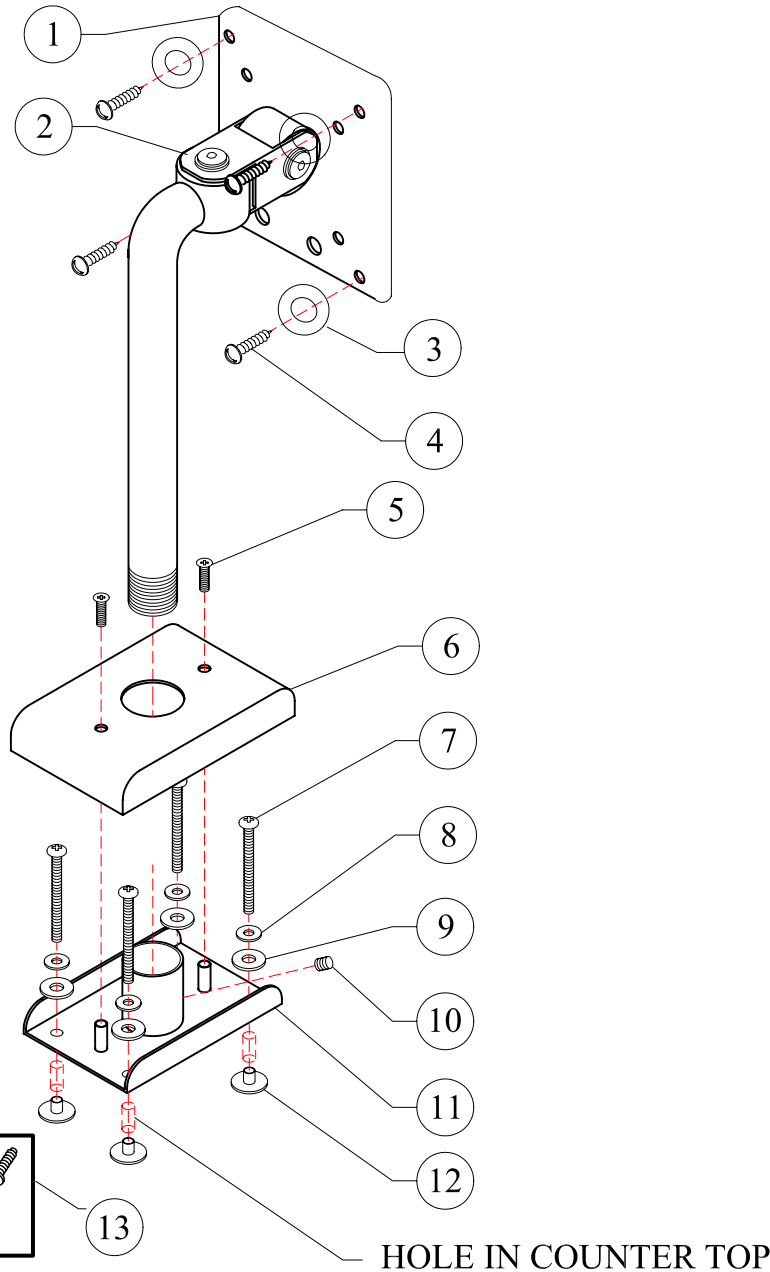

1. Attach adaptor plate (#1) to LCD screen with screws appropriate for your monitor. Use M4 x 10mm (#4) and 5mm Washers (#3) for model #s PDI-P20lcdc and LD-20A76UD.

M4 x 12mm screws (#13) are provided for Phillips model monitors.

2. Predetermine the best possible viewing location for the LCD/TV allowing for tilt and pivot action. If utilizing internal cord routing, drill hole in counter top in appropriate location to allow for cords to pass through.

3. Attach the mounting plate (#11) to the furniture with 10-24 pan hd. screws, #10 flat washers, 1/4" flat washers, and a #10-24 barrel nuts.

4. Place cover plate (#6) onto arm subassembly (#2) and screw arm subassembly (#2) to mounting plate and lock in place with set screw (#10).

5. Attach cover plate (#6) to mounting plate (#11) with 10-32 flat hd. screws (#7).

6. Check assembly for stability. Ensure all fittings and fasteners are properly tightened and safe.

7. Use cord access hole in bottom of arm subassembly (#2) to run cables up through pipe when application allows.

8. If screen is not parallel with countertop loosen acorn nut on screen adjustment slot, adjust and re-tighten.

ITEM NO.	DESCRIPTION	QTY
1	LCD ADAPTOR PLATE	1
2	ARM SUBASSEMBLY	1
3	5mm WASHERS	4
4	M4 X 10mm 0.7P MACHINE SCREWS	4
5	SCREW, FLAT HD, 10-32 X 3/4"	2
6	COVER PLATE	1
7	SCREW, PAN HD, 10-24 X 1-3/4"	4
8	WASHER, FLAT, #10	4
9	WASHER, FLAT, 1/4"	4
10	SETSCREW, 1/4-20 X .25 LG	1
11	MOUNTING PLATE	1
12	BARREL NUT, #10-24	4
13	M4 X 12mm 0.7P MACHINE SCREWS	4