

Samsung T.I.P.S. Sheet



Models: LN26D463 & LN32D463

Congratulations on the purchase of your new Samsung healthcare grade television!

Your new Samsung hospital television comes with a two year on-site warranty starting from the date of shipment.

Please take the time to familiarize yourself with the following pages and the enclosed quick start guide. The tips pages and guide will help walk you through the set up of your new LCD. If you encounter any problems during set up please call the number on the next page for assistance.


Thank you for your purchase.

To Report a Warranty Claim:

Call 1-800-535-2459 Option 1
or
Email to dispatch@telehealth.com

We will need the following information to log your claim:

- Serial Number
- Model Number
- Description of the problem
- Shipment address or Physical location of the equipment
- Point of contact and contact information

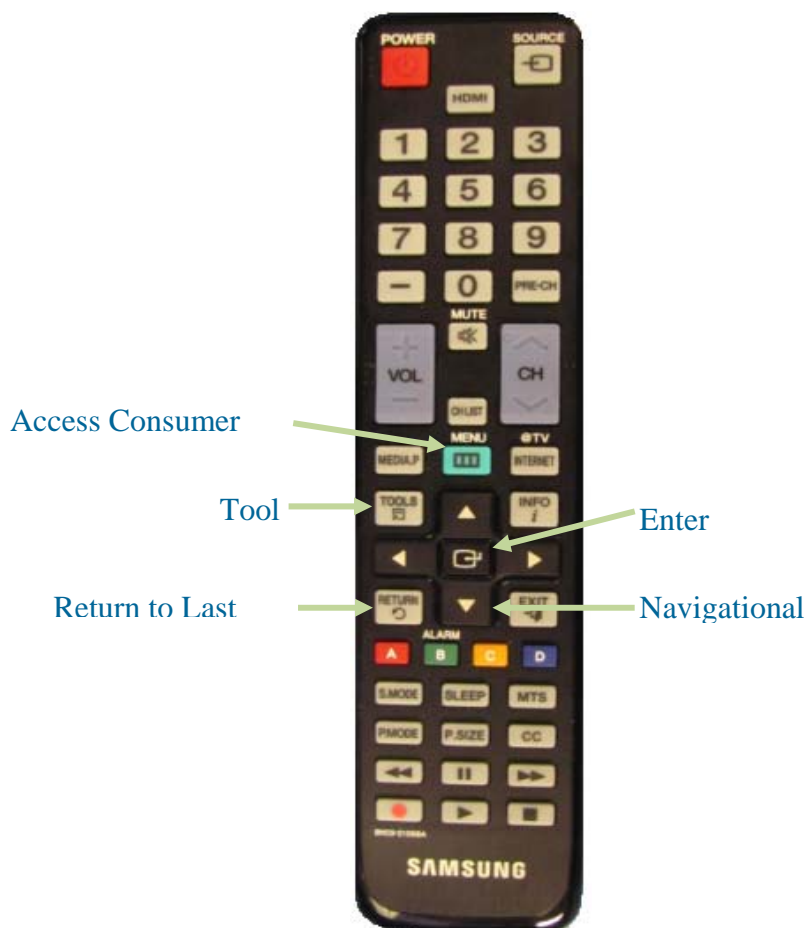

Initial Startup:

There are 2 methods that can be used to program set.

1. **Standalone Plug and Play** using setup wizard.
2. **Standalone Only** (then access commercial menu by entering **Mute-119-Enter**).

Method 1. Using Standalone Plug and Play Menu

Upon initial power up your tv will display three menu selections.



Use right arrow on remote to select Standalone Plug and Play then press enter.

Easy Steps to Set Up Samsung Televisions in Standalone Plug and Play:

<p>Step 1: Select Option Screen Upon initial power-up, your new set will display the Option Screen. If you do not see this screen, your TV is factory set to the correct option.</p>	<p>If you see the Option Screen, use the Arrow keys to select the Standalone Plug and Play Option and press ENTER. (This Option Screen will not display again once the option is set.)</p>	
<p>Step 2: Select Language</p>	<p>Select English from the <i>Menu Language</i> menu item, and press enter twice.</p>	
<p>Step 3: Clock Mode</p>	<p>Select Auto from the <i>Clock Mode</i> menu item, and press D (Blue).</p>	
<p>Step 4: Search Option</p>	<p>Insure Cable is checked with green check mark. Press down arrow then enter. Press down arrow twice to highlight Search then press enter. Press enter one more time to initiate the Autoprogram.</p>	



Step 5: Picture Mode

Select Dynamic from the *Select Picture Mode* menu item, and press enter.

Commercial Menu will appear when plug and play items have been set.

For basic operation there are 4 menu items you will need to set. To make selections use Up / Down arrows to navigate through menu. Use Right / Left buttons to change settings and Center button to select. Use Return button to return to menu.

Menu Item	Selection
Hospitality Mode	Standalone
Power On Volume EN	*Last Option- use for pillow speakers with digital volume control *User Defined- pillow speakers with thumbwheel volume then set Power On volume to desired level
Pillow Speaker Type	*CZ- Use for pillow speakers with Zenith codes *CP- Use for pillow speakers with Philips codes
Speaker Select	*Main - Audio from internal tv speakers and pillow speaker *External - Audio from pillow speaker only

Basic programming complete, press power button.

Method 2. Using Standalone Only

Upon initial power up your TV will display three menu selections.



Note: If no options appear on screen proceed to Commercial menu and hit Mute-119-Enter on your remote.

Use right arrow on remote to select Standalone Only then press enter.

Access **Commercial Menu** by entering **Mute-119-Enter**. *This code works with any of the initial settings. (interactive, standalone plug and play, or standalone only.)*

For basic operation there are 4 menu items you will need to set. To make selections use Up / Down arrows to navigate through menu. Use Right / Left buttons to change settings and Center button to select. Use Return button to return to menu.

Easy Steps to Set Up Samsung Televisions in Standalone Mode:

Menu Item	Selection
Hospitality Mode	Standalone
Power On Volume EN	*Last Option- use for pillow speakers with digital volume control *User Defined- pillow speakers with thumbwheel volume then set Power On volume to desired level
Pillow Speaker Type	*CZ- Use for pillow speakers with Zenith codes *CP- Use for pillow speakers with Philips codes

<p>Speaker Select</p>	<p>*Main - Audio from internal tv speakers and pillow speaker</p> <p>*External - Audio from pillow speaker only</p>
<p>Channel Autostore</p>	<p>*Menu selection initiates Autoprogram, press Enter</p> <p>*Insure cable has green check mark, Press down arrow to highlight Next, press Enter</p> <p>* Arrow down to search and press Enter to initiate autoprogram</p>

Basic programming complete, press power button.

Cloning


Cloning is very straightforward. Once the first television set has been configured manually, you can copy settings and programming to a blank USB memory stick. This is done from the Commercial Menu.

Clone TV Settings

- Make all necessary settings on a television set.
- Insert USB memory stick.
- Access the Commercial Menu by pressing buttons **MUTE-1-1-9-ENTER**.
- Highlight **Clone TV to USB** and press **ENTER**. TV settings will be copied to USB.

Transfer Cloned Settings to New TV

- Power set on. (If prompts appear, select **Standalone Only**. Press Enter, then once again when OK prompt appears)
- Insert USB and press and hold Enter button until “Copy data from USB to TV Set” appears on screen. *(pictured below)*

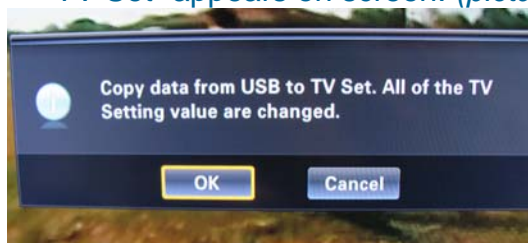

- Press **Enter** to copy data.
- Press **Enter** again when “Completed Successfully” appears. (Set will reboot automatically).